

User Manual

Portable thermal printer

s'print



All rights reserved. Total or partial reproduction of this manual in whatever form, whether by printed or electronic means, is forbidden. While guaranteeing that the information contained in it has been carefully checked, CUSTOM ENGINEERING SPA and other entities utilized in the realization of this manual bear no responsibility for how the manual is used.

Information regarding any errors found in it or suggestions on how it could be improved are appreciated. Since products are subject to continuous check and improvement, CUSTOM ENGINEERING SPA reserves the right to make changes in information contained in this manual without prior notification.

COD. DOME - DPT100-S

VERS. 1.00

Copyright © 2001 CUSTOM ENGINEERING SPA – Italy

CUSTOM ENGINEERING SPA

Str. Berettine 2 - 43010 Fontevivo (PARMA) - Italy

Phone: +39 0521-680111 - Fax: +39 0521-610701

<http://www.custom.it> <http://www.smice.com>

Customer Service Dept.:


Phone: +39 0521-680163 - Fax: +39 0521-680146

E-mail: support@custom.it

PRINTER COMPONENTS

A. DPT100-S – Front external view

- 1- Printer base
- 2- Cover
- 3- Paper holder
- 4- Printing mechanism
- 5- Multi-function + ON key
- 6- Paper exit slot
- 7- Status Led

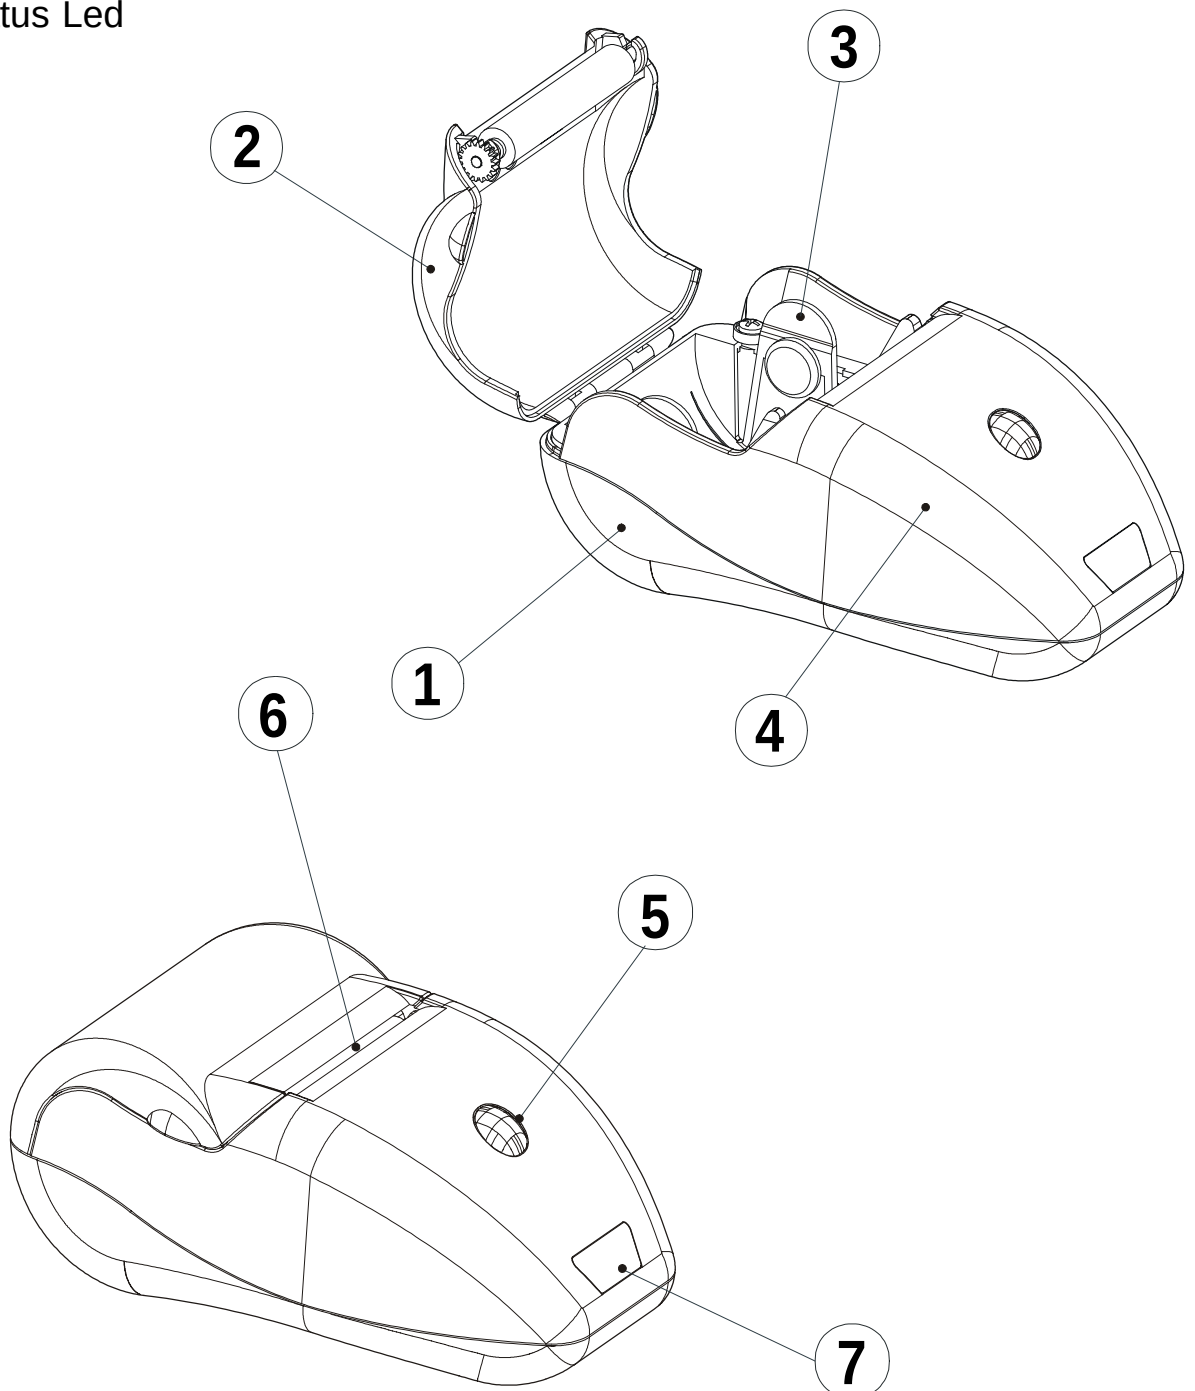

B. DPT100-S – Under view

1- Serial connector and power supply

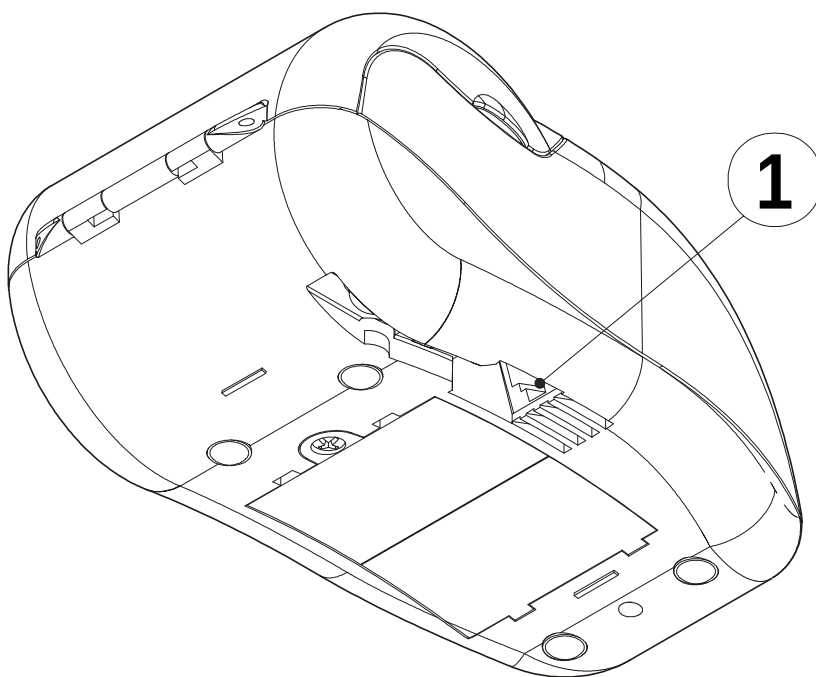


TABLE OF CONTENTS

INTRODUCTION

MANUAL CONTENTS	1
EXPLANATORY NOTES USED IN THIS MANUAL	1
GENERAL SAFETY INFORMATION	1
UNPACKING THE PRINTER	2
PRINTER FEATURES	3
PRINTER DESCRIPTION	4

1. INSTALLATION AND USE

1.1 CONNECTIONS	1-1
1.1.1 Power supply	1-1
1.1.2 Turning the printer On and Off	1-2
1.1.3 Connection with adapter	1-2
1.2 CONFIGURATION	1-3
1.2.1 Printing optimization using the power supply	1-4
1.3 HEXADECIMAL DUMP	1-5
1.4 SIXLOAD	1-5
1.5 MAINTENANCE	1-6
1.5.1 Changing the paper roll	1-6
1.5.2 Cleaning	1-8

2. INTERFACES

2.1 RS232 SERIAL	2-1
------------------------	-----

3. PRINTER OPERATION

3.1 CONTROL CHARACTERS	3-1
3.1.1 ESC/POS emulation	3-1

4. TECHNICAL SPECIFICATIONS

4.1 TECHNICAL SPECIFICATIONS	4-1
4.2 ADAPTOR SPECIFICATIONS	4-3
4.3 DIMENSIONS	4-4

5. CHARACTER FONTS

5.1 CHARACTER SETS 5-1

APPENDIX A - ACCESSORIES AND SPARE PARTS

A.1 SPARE PARTS A-1

MANUAL ORGANIZATION

In addition to the Introduction which includes a description of the explanatory notes used in the manual, general safety information, how to unpack the printer and a brief description of the printer including its basic features, this manual is organized as follows:

Chapter 1: Contains the information required for correct printer installation and its proper use, as well as interface specifications

Chapter 2: Contains information on interface specifications

Chapter 3: Contains a description of the printer command set

Chapter 4: Contains Technical Specifications of the printer

Chapter 5: Contains the character sets (fonts) used by the printer

SYMBOL USED IN THIS MANUAL

NOTE



Gives important information or suggestions relative to the use of the printer.

WARNING



Information marked with this symbol must be carefully followed to guard against damaging the printer.

DANGER



Information marked with this symbol must be carefully followed to guard against operator injury or damage.

GENERAL SAFETY INFORMATION

- Read and keep the instructions which follow.
- Before cleaning the printer, disconnect the power supply and make sure that the printer is off.
- Clean the printer with a damp cloth. Do not use liquid or spray products.
- Do not operate the printer near water.
- Only use approved accessories and batteries. Do not connect to products that are not compatible.


- Use the type of electrical power supply indicated on the printer label. If in doubt, contact your retailer.
- When deciding where to place the printer, make sure it is positioned where its cables will not be damaged.
- Do not introduce foreign objects of any kind into the printer as they could cause a short circuit and could jeopardize printer functioning.
- Do not spill liquids onto the printer.
- Do not carry out technical operations on the printer, with the exception of the scheduled maintenance procedures specifically indicated in the user manual.
- Disconnect the printer from the electricity supply and have it repaired by a specialized technician when:
 - A. The feed connector has been damaged.
 - B. Liquid has seeped inside of the printer.
 - C. The printer has been exposed to rain or water.
 - D. The printer is not functioning normally despite the fact that all instructions in the users manual have been followed.
 - E. The printer has been dropped and its outer casing damaged.
 - F. Printer performance is poor.
 - G. The printer is not functioning.

UNPACKING THE PRINTER

Remove the printer from its carton being careful not to damage the packing material so that it may be re-used if the printer is to be transported in the future.

Make sure that all the components illustrated in fig. 1 are present and that there are no signs of damage. If there are, contact Customer Service.

1. Warning sheet
2. Cable
3. Paper roll
4. Adaptor
5. Printer
6. Box

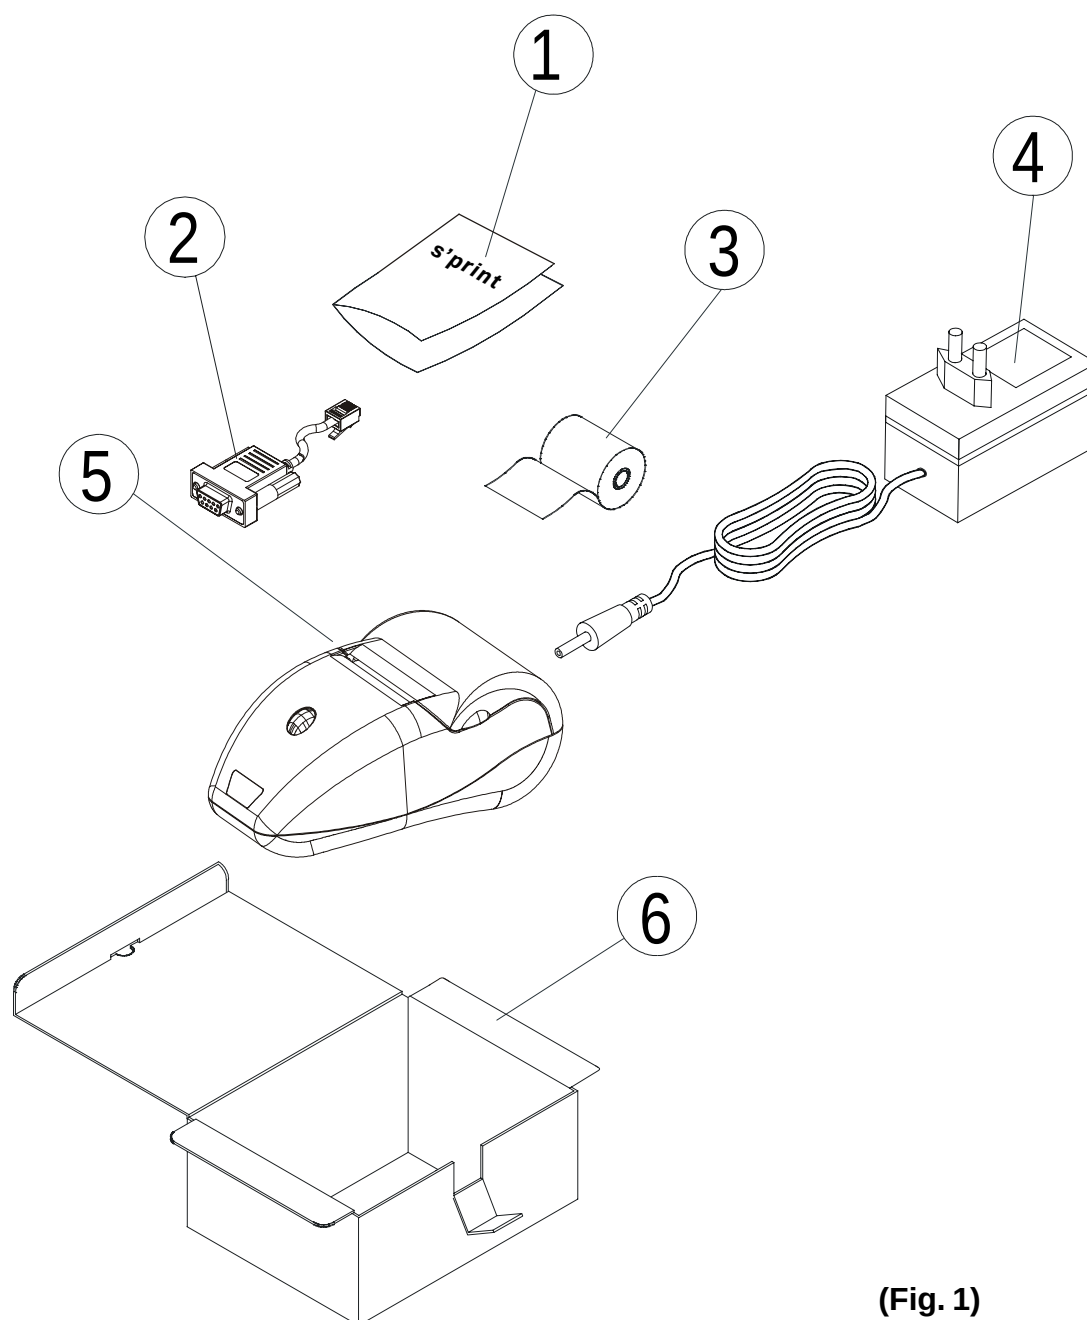

(Fig. 1)

PRINTER FEATURES

The new **s' print** portable thermal printer offers an innovative alternative to impact-based systems, with a range of interface options (RS232 serial, RS232+IRDA). The printer may be powered using an external adapter.

The **desktop version** (with RS232 interface) without battery is intended for the instrumentation, retail and general cash register sectors (for example, terminals for credit card payment).

It is important to note that **s' print** is the first Custom printer designed with

“sixload” easy paper load, making it simpler and more convenient to use.

It has a 203 dpi thermal print mechanism that utilizes 57.5mm-wide paper rolls and can print up to 24 or 40⁽¹⁾ characters per line.


⁽¹⁾NOTE



The 40 column version is downloadable on the Support/Download/Firmware section from www.custom.it web site.

PRINTER DESCRIPTION

The printers consists of a ABS-V0 casing (1) equipped with a cover (2) under which is housed the paper roll and print mechanism. On the front is the multi-function key (3) and red LED (4).

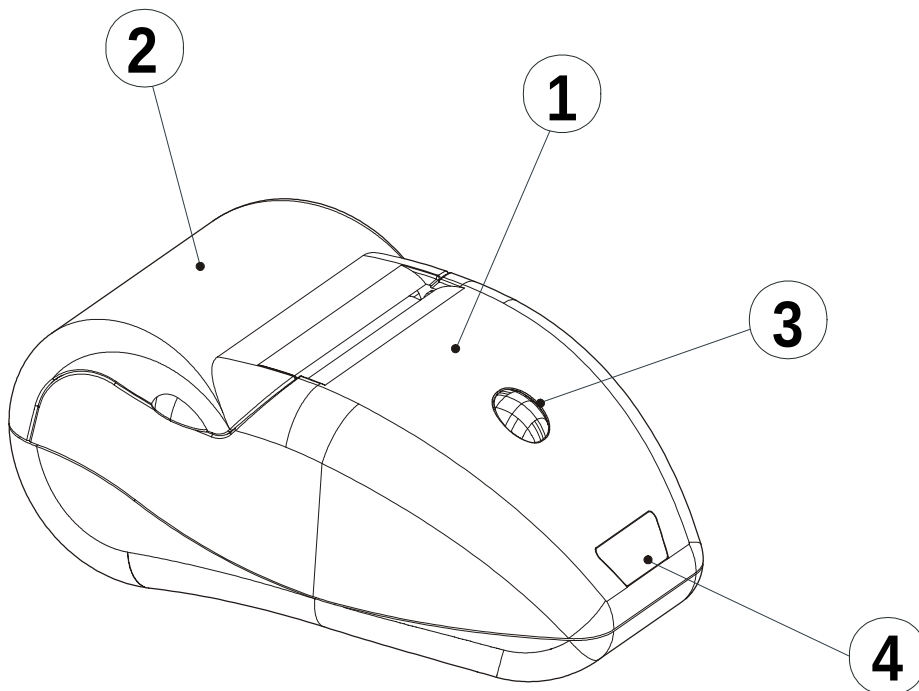


(Fig. 2)

- Multi-function key. This key is used to access a variety of printer options depending on how long it is held down. If the printer is off (red LED off), when this key is pressed power is turned on (blinking red LED). To turn the printer off the key is pressed two times (the LED begins to blink faster) and if it is not pressed again within three seconds the printer shuts off, otherwise it returns to operating status.
During the power-up phase, if the key is held down for at least three seconds, the printer enters the configuration mode and prints out a printer setup report. When the print-out is complete, the printer remains in stand-by to receive characters from the serial interface that are printed out in hexadecimal code.
If the key is pressed, the printer by-passes the setup mode and terminates the hexadecimal dump function. Pressing the key quickly will exit the configuration mode, while if it is held down for at least a second, it is possible to make changes in the individual parameters.
- The red LED displays printer operating status and this check is performed “on-line”. Table 1 lists operating statuses and the LED signals connected to them:

(Tab.1)

LED status	Description
Always off	Printer off
Very slow blinking (one blink every three seconds)	Printer On - no fault
Slow blinking (one blink every second)	Paper Out message
Fast blinking (one blink every half second)	Resettable error (head overheating, error power supply voltage)
Very fast blinking (seven blinks per second)	In process of shutting off

1.1 CONNECTIONS

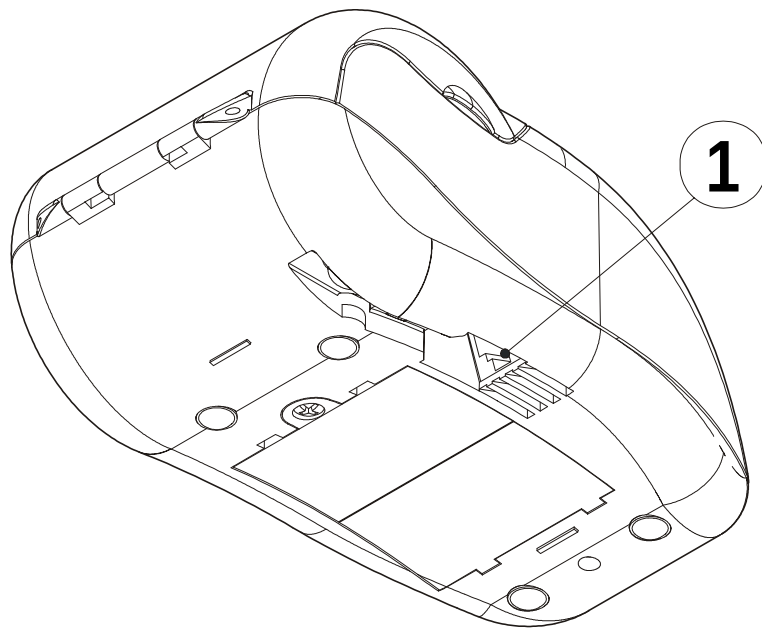


(Fig.1.1)

1.1.1 Power Supply

For the Battery Recharger/Power Supply and serial connection, the printer is equipped with a connecting cable (fig. 1.2) that comes packed with the printer and has a double connection system. On one side is a 9-pin female connector (fig. 1.2.A) for the serial port; on the other side of the same connector is a RJ11 connector (fig. 1.2.B) and a jack (fig. 1.2.C) for connection to an external adapter (fig. 1.2.D).

To supply power to the printer and for the serial connection, use the connection cable (fig. 1.2) that comes packed with the printer and following the instructions listed in the paragraph 1.1.3.

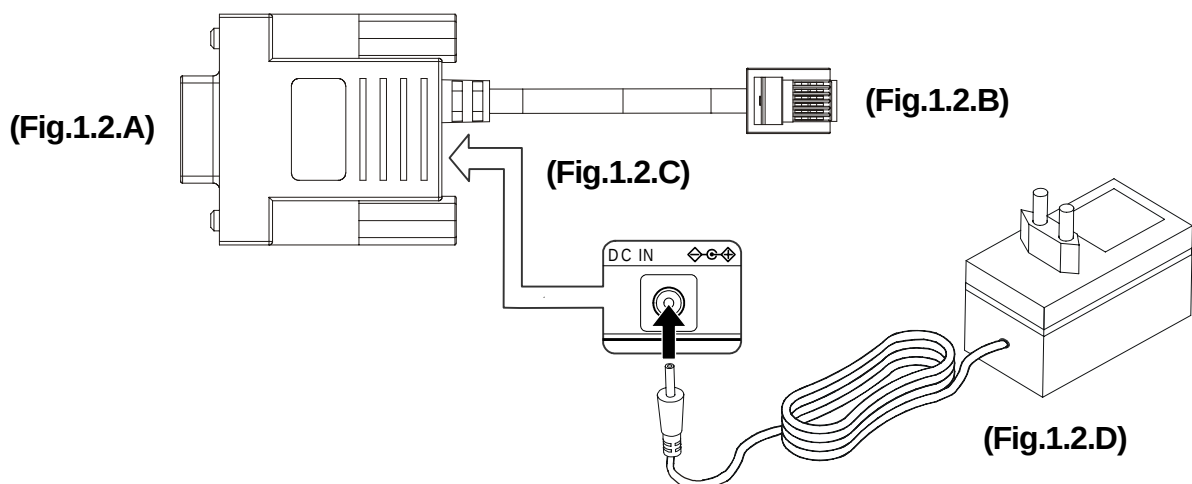

1.1.2 Turning the printer On and Off

How to turn the printer On

- Connect the power supply to the printer (see sec. 1.2)


How to turn the printer Off

- Turn off the power supply.

1.1.3 Connection with the power supply

To supply the printer use the adapter and cable packed with the printer and proceed as follows:

- connect the adapter jack to the cable jack (see fig. 1.3) and plug the adapter into the electrical mains;
- connect the cable RJ11 connector to the RJ11 connector located under the printer (see fig. 1.3).

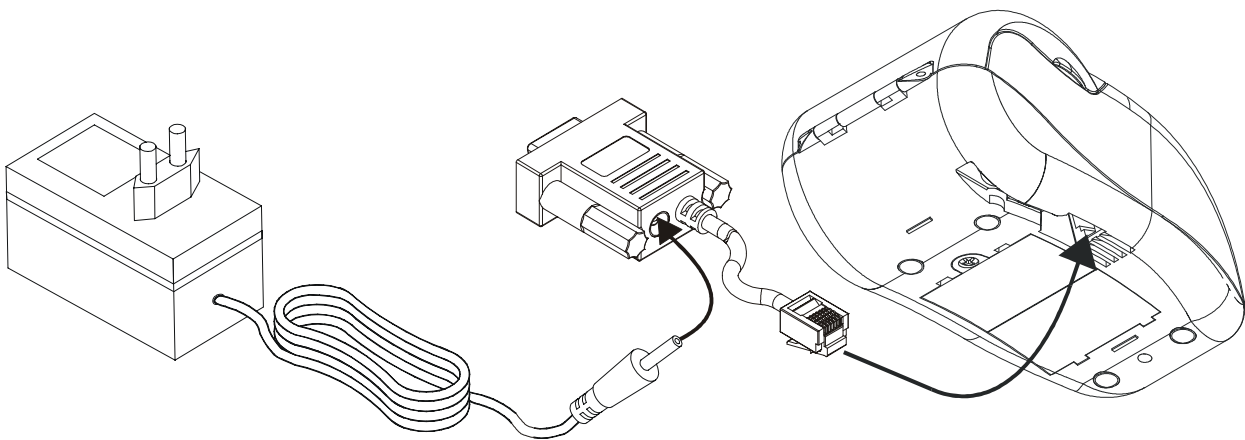

(Fig.1.3)

1.2 CONFIGURATION

The printer set up print out (see fig. 1.4) includes a range of information, and among these should be pointed out.

* SETUP DEFAULT *	
HEAD TEMP. [°C]	= 22.5
BATT TEMP. [°C]	= 25.0
HEAD VOLT [V]	= 6.3
Interface	:RS232
Baud Rate	: 9600 bps
Data length	: 8 bits/chr
Parity	: None
Handshaking	: Xon/Xoff
Autofeed	: CR disabled
Consumption	: High power
Print Density	: 0
[PUSH] ENTER SET-UP	
[FAST PUSH] EXIT SET-UP	

(Fig.1.4)

The printer's configurable⁽¹⁾ parameters are:

- **Baud Rate:** 38400, 19200, 9600^D, 4800, 2400, 1200, 600.
- **Data length:** 7, 8^D bits/car.
- **Parity:** None^D, even or odd.
- **Handshaking:** XON/XOFF^D or Hardware.
- **Autofeed:** CR deactivated^D or CR activated.
- **Consumption:** Low power, High power^D ⁽²⁾.
- **Print density:** -2, -1, 0^D, +1, +2.

Please note: the parameters marked with the symbol ^D represent the default values.



⁽¹⁾ **Note:** the printer interface is fixed setted to RS232.



⁽²⁾ **Note:** this parameter regulates the type of power supply setting; the default value is High power. For further details please refers to the 1.2.1 section.

Each time the key is pressed quickly, the parameter will change and the current value will be printed out. Once the desired value has been attained, hold the key down for at least a second to pass to the next parameter, and so on. Printing out of a new printer set up report indicates that set up is complete.

1.2.1 Printing optimization using the power supply

It's possible to optimize the printing, configuring in appropriate way, on the basis of printing tipology, the "Consumption" parameter, that indicate the type of power supply setting. The default value, setted during the printer setup, is High power.

With the power supply that comes packed with the printer, proceeds as follows :

- 1) if the performances in printing are not considerables, in the printer setup configure the Consumption parameter setting the value to Low power⁽³⁾.



⁽³⁾ **NOTE:** if the Consumption parameter is setted to Low power, it's advisable not to exceed the black per cent over 80 % (each dotline should have 300 dot on at most).

- 2) For dot's quantity superior to 80% ⁽⁴⁾ use a different⁽⁵⁾ power supply than the one equipped with the printer.



⁽⁴⁾ **NOTE:** the per cents reported as analytic data indicate the number of dots on in a dotline.



⁽⁵⁾ **NOTE:** to use the printer with a higher speed feed it with a power rate superior to 25W.

1. INSTALLATION AND USE

1.3 HEXADECIMAL DUMP

This function is used to display the characters received from the communications port; after the reception of each 10 characters from the communications port, the printer prints out both the hexadecimal code received as well as the corresponding ASCII code.


Shown below is an example of a Hexadecimal Dump:

48	65	78	61	64	65	Hexade
63	69	6D	61	6C	20	cimal
64	75	6D	70	20	66	dump f
75	6E	63	74	69	6F	unctio
6E	20	30	31	32	33	n 0123
34	35	36	37	38	39	456789
61	62	63	64	65	66	abcdef
67	68	69	6A	6B	6C	ghijkl
6D	6E	6F	70	71	72	mnopqr
73	74	75	76	77	78	stuvwx
79	7A					yz

1.4 SIXLOAD

The printer has been designed with an **easy paper load** system to improve handling and simplify use.

This easy paper loading system is called “**sixload**” because when the paper is loaded into the printer, it looks like the number “6” (the roll on the bottom with the edge lifted).

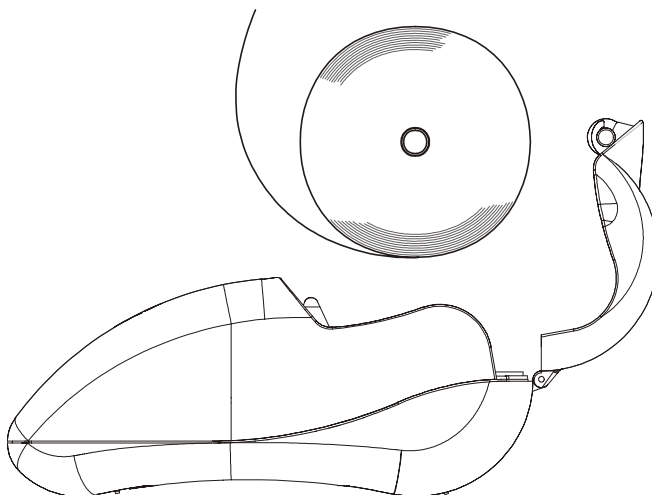


(Fig.1.5)

1.5 MAINTENANCE


1.5.1 Changing the paper roll

To change the roll of paper, proceed as follows:

- 1) Open the printer cover (see fig. 1.11) levering on the cover lateral projections and position the paper roll so that it unrolls in the direction shown in figure 1.6;

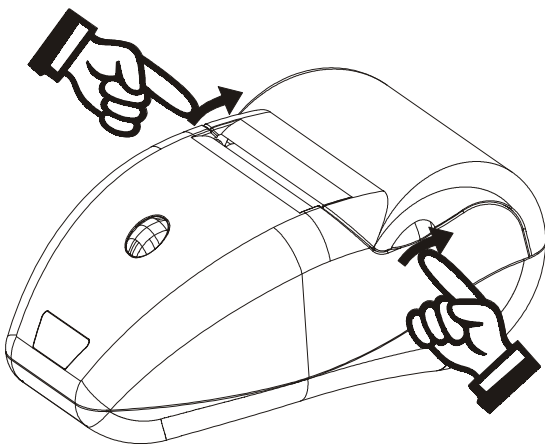


(Fig.1.6)

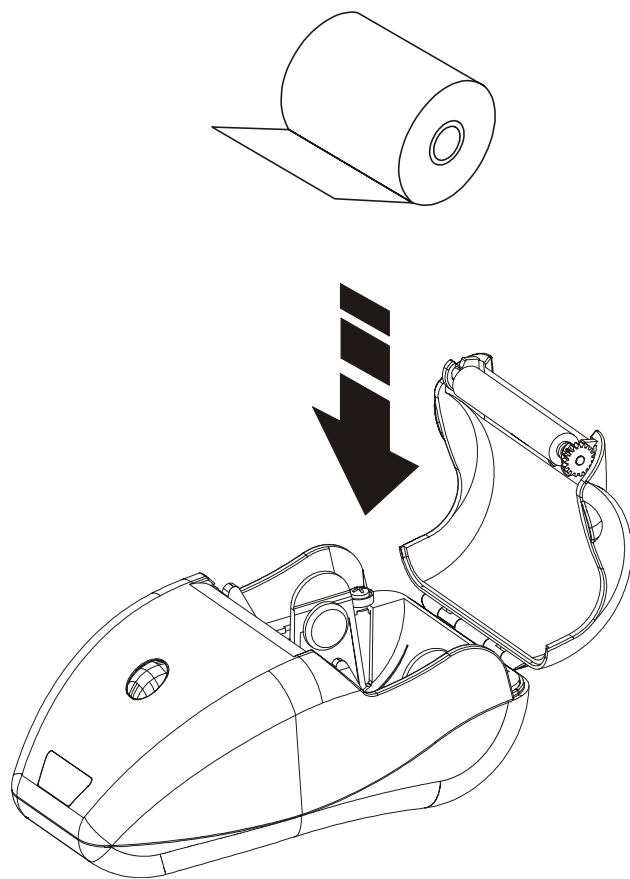

(Fig.1.7)


1. INSTALLATION AND USE

- 2) Pull up on the edge of the paper and close the cover (fig. 1.13);

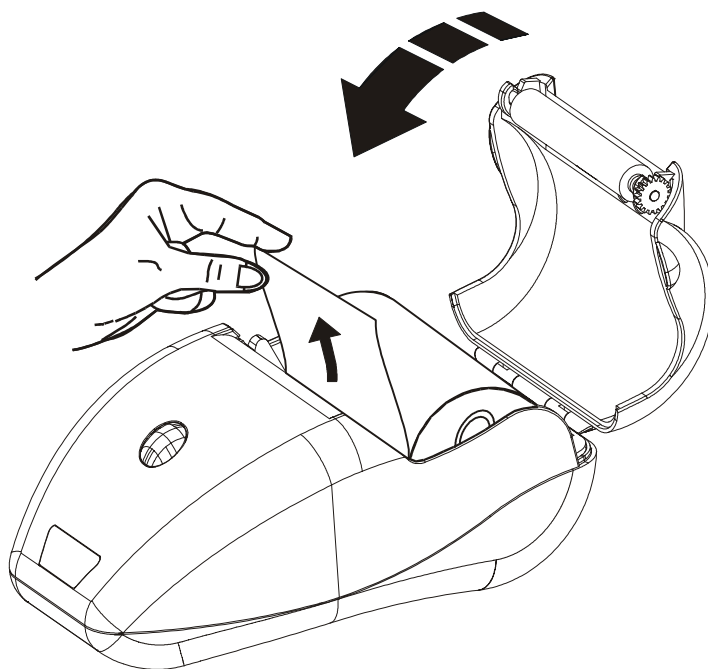

(Fig.1.8)

- 3) Tear off the paper. The printer is now ready (fig.1.14).

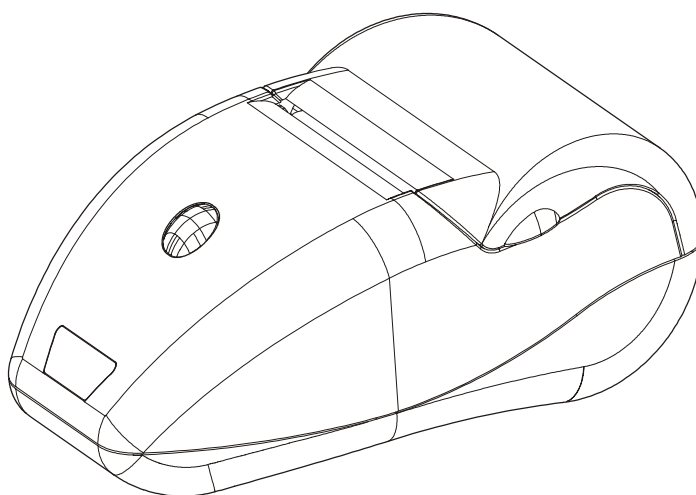

(Fig.1.9)


1.5.2 Cleaning

To clean the printer, use a vacuum cleaner or soft cloth.

Before cleaning the printer, unplug its electrical cord and make sure that the printer is off.


Do not use alcohol, solvents or hard-bristled brushes.

Do not let water or other liquids seep into the printer.

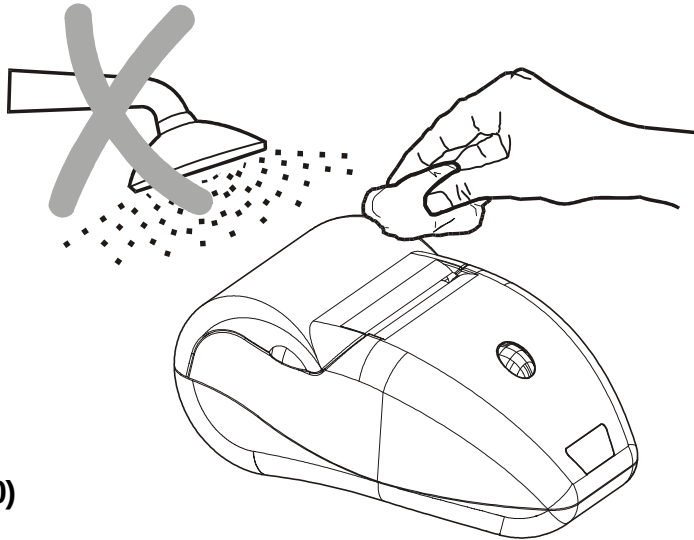

(Fig.1.10)


alcohol, solvent

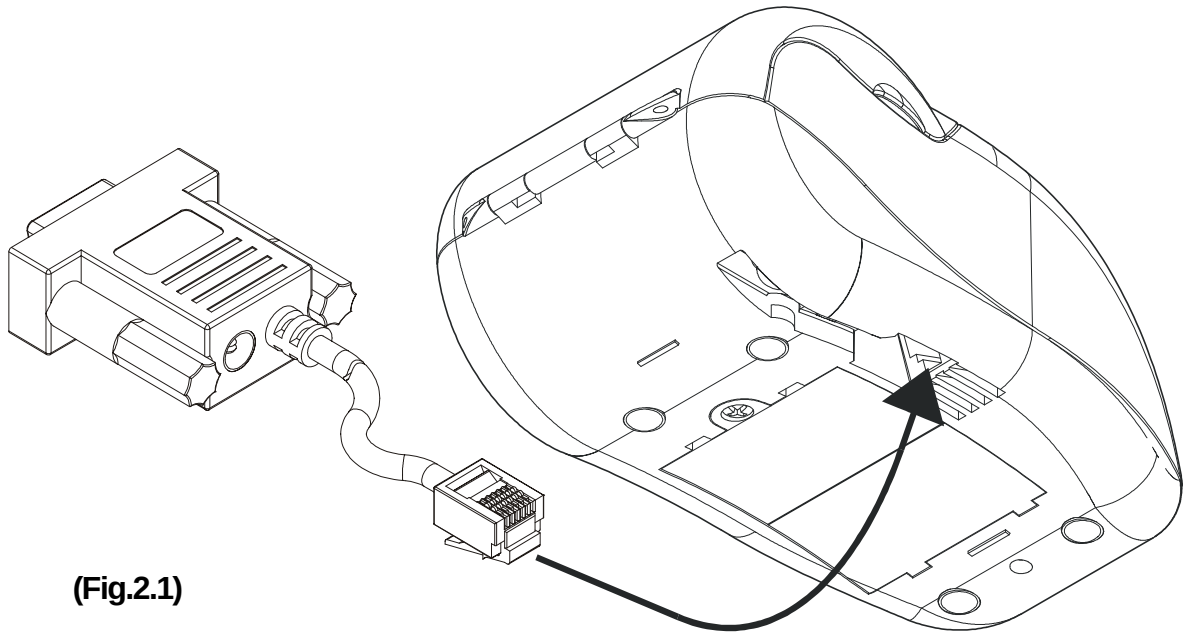

(Fig.2.1)

2.1 RS232 SERIAL

The printer is equipped with an RS232 serial interface with RJ11 connector (fig. 2.1) located underneath the printer. For serial connection, a connecting cable (fig. 2.2) with double connection system is packed with the printer. On one side is a 9-pin female connector (fig. 2.2A) to connect to the serial port; on the other side of the same connector is a RJ11 connector (fig. 2.2.B). For the layout of signals on the connectors, please refer to tables 2.1 and 2.2.

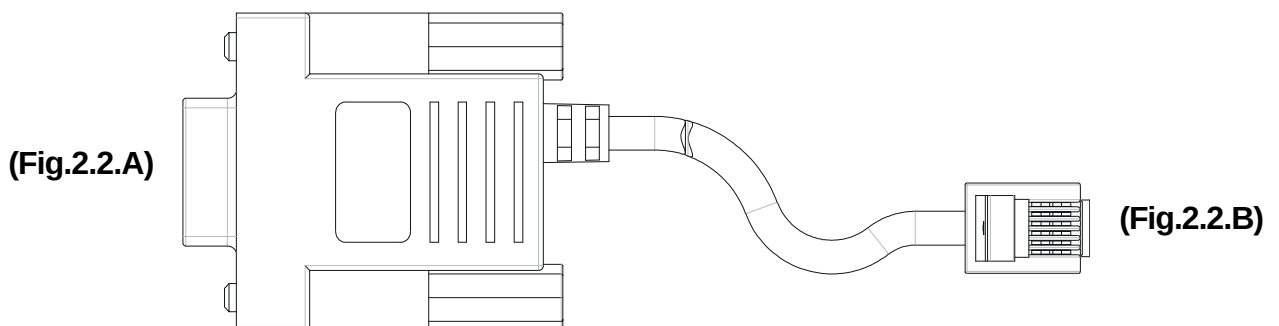

RJ11 connector DPT100 (fig. 2.1)

(Tab.2.1)

PIN	SIGNAL	IN/OUT	A	DESCRIPTION
1	+VRIC	IN	-	External power supply voltage
2	GND	-	GND	Ground signal
3	RX	IN	TXD	Receive data
4	TX	OUT	RXD	Transmit data
5	RTS	OUT	CTS	Ready to send / Ready to receive data
6	GND	-	GND	Ground signal

9-pin female connector (fig. 2.2.A)


(Tab.2.2)

PIN	SIGNAL	IN/OUT	A	DESCRIPTION
1	DCD	OUT	DCD	Data carrier identification. Printer On (active at RS232 high)
2	TXD	OUT	RXD	Transmit data. Serial output (from host)
3	RXD	IN	TXD	Receive data. Serial data input (to host)
4	N.C.	-	N.C.	Not connected
5	GND	-	GND	Ground signal
6	DSR	OUT	DSR	Data set ready. Printer ON and operating (active at RS232 high)
7	N.C.	-	N.C.	Not connected
8	RTS	OUT	CTS	Ready to send / Ready to receive data (active at RS232 high)
9	N.C.	-	N.C.	Not connected


2. INTERFACES

The diagrams below show a sample connection between printer and Personal Computer using a 9- and 25-pin female connector.

(Fig.2.2)

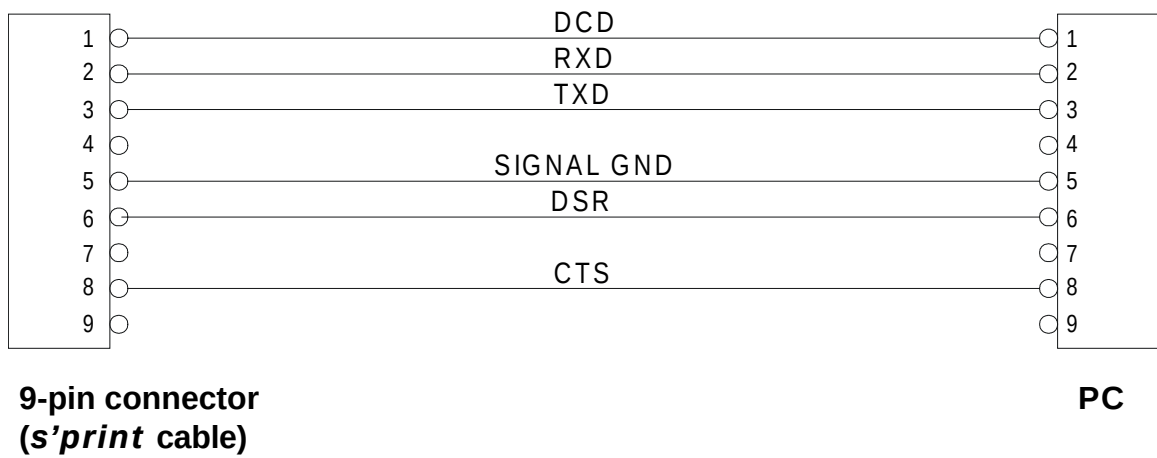

(Fig.2.3)

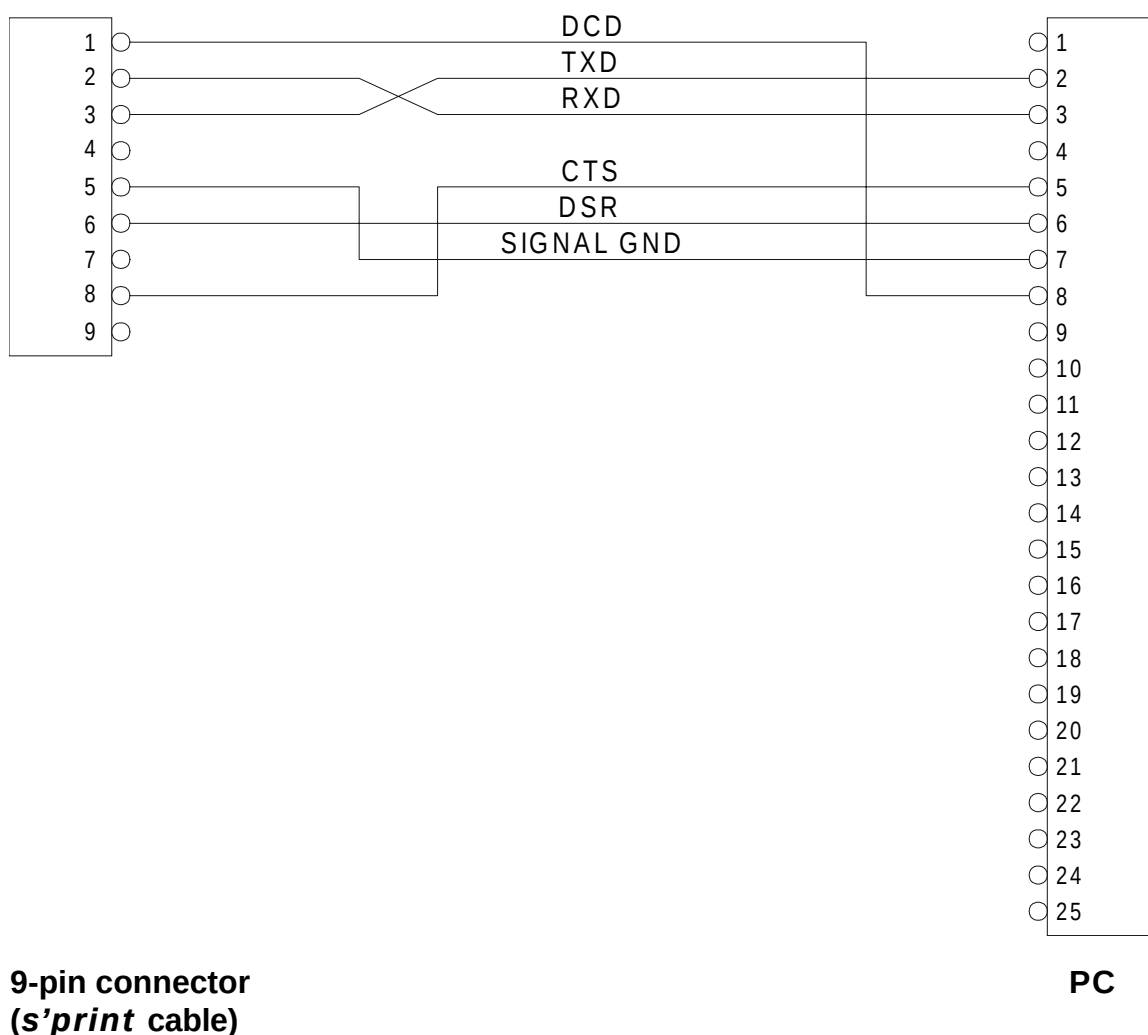

3. PRINTER FUNCTIONS

3.1 CONTROL CHARACTERS

The command table lists all the commands for the management of the printer functions. These commands can be transmitted to the printer with the serial interface. The commands can be transmitted to the printer at any moment, but they will only be carried out when the characters previously transmitted have been printed or the commands previously transmitted have been carried out. There are no commands with priority status; all the commands are carried out when the circular buffer is free to do so.

(Tab.3.1)

COMMAND TABLE

ASCII Com.	HEX Com.	Description
	\$00	Prints in small characters
	\$01	Prints in double width
	\$02	Prints in double height
	\$03	Expanded printing
	\$04	Restores small character printing
	\$07	Cancel print data buffer
	\$0A	Forward feeds one line
	(n) \$0B	Forward feeds (n) line
	\$0D	Prints line buffer
	\$0F	Sets CRLF mode
	\$11	Graphic mode
ESC # n	\$1B \$23 n	Transmit printer ID
ESC @	\$1B \$40	Resets the printer
ESC A	\$1B \$41	Executes [n] dots line feed
(dd) ESC M	(dd) \$1B \$4D	Writes value (dd) in print mode
ESC N	\$1B \$4E	Sets normal mode printing
ESC Q	\$1B \$51	Enables underlining
ESC R	\$1B \$52	Sets reverse mode printing
ESC W	\$1B \$57	Prints graphic line of 200 dpi
(dd) ESC a	\$1B \$61	Selects number of dot spaces

3. PRINTER FUNCTIONS

ASCII Com.	HEX Com.	Description
ESC c	\$1B \$63	Management of bar code printing
ESC m	\$1B \$6D	Transmits print mode in serial
ESC q	\$1B \$71	Disables underlining
ESC s	\$1B \$73	Transmits next character in serial
ESC v	\$1B \$76	Transmits a printer status
ESC · n1 n2	\$1B \$FA n1 n2	Print graphic
GS \$ n	\$1D \$24 n	Set absolute shift into a graphic line
GS I n	\$1D \$49 n	Transmits the printer ID
GS U	\$1D \$55	Resets printer parameters to default value
GS W n	\$1D \$57 n	Prints n byte of a 200 dpi graphic line

The following pages provide a more detailed description of each command.

00H

[Name]	Small character printing
[Format]	ASCII - Hex 00 Decimal 0
[Description]	The printer prints in small characters (normal)
[Notes]	• The commands 00H - 09H do not cancel the print buffer • The commands which modify the direction of the characters are only active at the beginning of the line
[Default]	Setting in option register by means of front keys
[Reference]	01H, 02H, 03H, 04H
[Example]	

01H

[Name]	Double width printing
[Format]	ASCII - Hex 01 Decimal 1
[Description]	The printer prints in double width format

3. PRINTER FUNCTIONS

[Notes]	• The commands 00H - 09H do not cancel the print buffer • The commands which modify the direction of the characters are only active at the beginning of the line
[Default]	Setting in option register by means of front keys
[Reference]	00H, 02H, 03H, 04H
[Example]	

02H

[Name]	Double height printing
[Format]	ASCII - Hex 02 Decimal 2
[Description]	The printer prints in double height format
[Notes]	• The commands 00H - 09H do not cancel the print buffer • The commands which modify the direction of the characters are only active at the beginning of the line
[Default]	Setting in option register by means of front keys
[Reference]	00H, 01H, 03H, 04H
[Example]	

03H

[Name]	Expanded printing
[Format]	ASCII - Hex 03 Decimal 3
[Description]	The printer prints in expanded character mode
[Notes]	• commands 00H-09H do not cancel the print buffer • the commands which modify the dimensions of the characters are only active at the beginning of the line
[Default]	Setting in the option register by means of the front keys
[Reference]	00H, 01H, 02H, 04H
[Example]	

04H

[Name]	Restore small character printing
[Format]	ASCII -
	Hex 04
	Decimal 4
[Description]	The printer resumes printing with small characters
[Notes]	• The commands 00H-09H do not cancel the print buffer • the commands which modify the dimensions of the characters are only active at the beginning of the line
[Default]	Setting in the option register by means of the front keys
[Reference]	00H, 01H, 02H, 03H
[Example]	

07H

[Name]	Cancel print data buffer
[Format]	ASCII -
	Hex 07
	Decimal 7
[Description]	Deletes all the print data in the current print buffer.
[Notes]	• If data that existed in the previously specified printing area also exists in the currently specified printing area, it is deleted.
[Default]	
[Reference]	
[Example]	

0AH

[Name]	Forward feeds one line
[Format]	ASCII -
	Hex 0A
	Decimal 10
[Description]	Forward feeds one line equivalent to a line of print
[Notes]	• This command brings about the printing of the contents of the line buffer.
[Default]	

3. PRINTER FUNCTIONS

[Reference] **0BH**

[Example]

(n) 0BH

[Name] **Forward feeds (n) lines**

[Format] ASCII -
 Hex 0B
 Decimal 11

[Description] Carries out the number of line feeds specified in (n)

[Notes] • The number must be ASCII and between 0 and 9 (when n=0 the command is ignored)
 • This command clears the line buffer

[Default]

[Reference] **0AH**

[Example] To forward feed fast, 5 lines at a time:
 \$35 \$0B (or 5 and the command \$0B)

0DH

[Name] **Print the line buffer**

[Format] ASCII -
 Hex 0D
 Decimal 13

[Description] This command prints the line buffer

[Notes] • If the line buffer is empty, the command is ignored
 • If the CRLF option is set, this command is ignored and printing can only be ordered through the command \$0A

[Default]

[Reference] **0FH**

[Example]

0FH

[Name]	Set CRLF mode
[Format]	ASCII -
	Hex 0F
	Decimal 15
[Description]	Inhibits the command \$0D maintaining enabled only the command \$0A for printing
[Notes]	• To disable this option, reset the printer • This command clears the line buffer • On switching on the default value is in the Option Register
[Default]	Setting in the option register by means of the front keys
[Reference]	0DH
[Example]	

11H

[Name]	Graphic mode
[Format]	ASCII -
	Hex 11
	Decimal 17
[Description]	Enables graphic mode: a line in 24 column mode corresponds to 144 horizontal dots divided into 24 blocks of 6 dots each; a line in 40 column mode corresponds to 240 horizontal dots divided into 40 blocks of 6 dots each.
[Notes]	To obtain graphic printing, enter the command \$11 at the beginning of each line. The format of the byte in graphic configuration is: X R P6 P5 P4 P3 P2 P1 D7 D6 D5 D4 D3 D2 D1 D0 where: X is not used (0 is recommended); R must be fixed at level 1; P1,,P6 are the graphic dot data (1 prints, 0 does not print). The P6 bit of the string of dots transmitted is printed on the left and the others follow from left to right (P5, P4, P3, P2,

3. PRINTER FUNCTIONS

P1) as shown:

1st byte →

P6 P5 P4 P3 P2 P1

2nd byte →

P6 P5 P4 P3 P2 P1

3rd byte →

P6 P5 P4 P3 P2 P1

[Default]

[Reference]

[Example]

To print a line of dots, transmit:

\$11, n x \$7F (where n is the number of characters per line),
\$0D.

To print an empty line, transmit:

\$11, \$40, \$0D.

ESC # n

[Name] **Transmit printer ID**

[Format] ASCII ESC # n
 Hex 1B 23 n
 Decimal 27 73 n

[Range] $1 \leq n \leq 3$, $49 \leq n \leq 51$

[Description] Transmits the printer ID specified by *n* follows:

n	Printer ID	Specification
1, 49	Printer model ID	50H
2, 50	Not used	Fixed to Off
3, 51	ROM version ID	Depends on ROM version (4 character)

[Notes] • This command is executed when the data is processed in the data buffer. Therefore, there could be a time lag between command reception and data transmission, depending on data buffer status.

[Default]

[Reference]

[Example]

ESC @

[Name]	Resets the printer		
[Format]	ASCII	ESC	@
	Hex	1B	40
	Decimal	27	64
[Description]	Cancels all the data in the print buffer and resets the printer mode, restoring the mode which was enabled at the moment of switching on		
[Notes]	• Same as hardware reset • After the command has been transmitted, 1.5 seconds elapse before the printer is enabled		
[Default]			
[Reference]			
[Example]	This can be useful during switching on in order to avoid the sending of false characters during initialization by the master device		

ESC A [nH] [nL]

[Name]	Executes [n] dots line feed			
[Format]	ASCII	ESC A	nH	nL
	Hex	1B 41	nH	nL
	Decimal	27 65	nH	nL
[Description]	Executes [n] dots line feed.			
[Notes]				
[Default]				
[Reference]				
[Example]				

(dd) ESC M

[Name]	Writes the value (dd) in the print mode				
[Format]	ASCII	dH	dL	ESC	M
	Hex	dH	dL	1B	4D
	Decimal	dH	dL	27	77
[Description]	Sets the print mode default parameters: \$00 small character printing				

3. PRINTER FUNCTIONS

	\$01 double width printing
	\$02 double height printing
	\$03 expanded printing
[Notes]	• The setting is stored in the EEPROM
[Default]	Setting by means of the front keys
[Reference]	ESC m
[Example]	For double height printing, transmit: \$30 \$32 \$1B \$4D

ESC N

[Name]	Set normal mode printing		
[Format]	ASCII	ESC	N
	Hex	1B	4E
	Decimal	27	78
[Description]	Select normal mode printing:the receipt feeds out of the printer with the printing upside down running from right to left		
[Notes]			
[Default]	Setting in option register by means of front keys		
[Reference]	ESC R		
[Example]			

ESC Q

[Name]	Enable underlined printing		
[Format]	ASCII	ESC	Q
	Hex	1B	51
	Decimal	27	81
[Description]	After this command has been received, the characters are printed underlined		
[Note]			
[Default]			
[Reference]	ESC q		
[Example]			

ESC R

[Name]	Set reverse mode printing		
[Format]	ASCII	ESC	R
	Hex	1B	52
	Decimal	27	82
[Description]	Selects printing in reverse mode: the receipt feeds out of the printer with the printing in normal mode running from left to right.		
[Notes]			
[Default]	Setting in option register by means of front keys		
[Reference]	ESC N		
[Example]			

ESC W

[Name]	Prints a graphic line at 200 dpi		
[Format]	ASCII	ESC	W
	Hex	1B	57
	Decimal	27	87
[Description]	After receiving this command, the printer waits for 48 bytes which correspond to an entire graphic line. In fact, 48 bytes of 8 bits each correspond to 384 dots per line.		
[Notes]			
[Default]			
[Reference]			
[Example]			

(dd) ESC a

[Name]	Selects the number of dot spaces			
[Format]	ASCII	(dd)	ESC	a
	Hex	(dd)	1B	61
	Decimal	(dd)	27	97
[Description]	(dd) are two ASCII characters which identify a hexadecimal byte and correspond to the number of dot lines between one print line and another			
[Notes]				

3. PRINTER FUNCTIONS

[Default] 0
 [Reference]
 [Example]

ESC c

[Name] **Management of bar code printing**

[Format] ASCII ESC c [code] [height] [position] [options]
 [length] [data]

Hex 1B 63

Decimal 27 99

[Description] [ASCII code] Type of bar code

I Interleaved 2/5

C Code 39

B CodaBar

e EAN8

E EAN13

[height]

Number of dot lines in 1/8 mm. units.

[position]

Left hand margin, expressed in 1/8 mm. units

[options]

bit

bit 0

bit 1

bit0: check digit

is not printed

is printed

bit3,2: HRI 0=no

1=above

2=below

3=above & below

low

bit5,4: size 0=normal

1=double

2=triple

3=quadruple

[maximum length]

Interleaved 2/5 = 12 characters

Code 39 = 10 characters

CodaBar = 10 characters

EAN8 = 8 characters
 EAN13 = 13 characters

[data]

Expressed in ASCII

[Notes]

[Default]

[Reference]

[Example]

ESC m

[Name]	Transmits the print mode in serial		
[Format]	ASCII	ESC	m
	Hex	1B	6D
	Decimal	27	109
[Description]	Transmits the print mode configuration on the serial port		
[Notes]	• If the printer is using the parallel protocol, nothing will be transmitted		
[Default]	Setting in the option register by means of the front keys		
[Reference]	ESC B		
[Example]	The response is on two bytes. E.g. if you receive:		
	\$30, \$32		
	it means that printing is in double height mode		

ESC q

[Name]	Disables underlined printing		
[Format]	ASCII	ESC	q
	Hex	1B	71
	Decimal	27	113
[Description]	Annuls underlined printing		
[Notes]			
[Default]			
[Reference]	ESC Q		
[Example]			

3. PRINTER FUNCTIONS

ESC s

[Name]	Transmits the next character in serial		
[Format]	ASCII	ESC	s
	Hex	1B	73
	Decimal	27	115
[Description]	Transmits the next character it receives on the serial port		
[Notes]			
[Default]			
[Reference]			
[Example]	If you transmit: ESC s A the last character, A, will not be printed but immediately transmitted on the serial line		

ESC · n1 n2

[Name]	Print graphic bank (384 ´ 85 dots).		
[Format]	ASCII	ESC	· n1 n2
	Hex	1B	FA n1 n2
	Decimal	27	250 n1 n2
[Range]	0 £ n 1n 255		
[Description]	Prints the graphics bank from flash. n 1specifies the starting dot line (1 ÷ 85). n 2specifies the number of lines to print.		
[Notes]	• If n1 + n2 > 85 the printer only prints 85 - n 1+ 1 dotlines.		
[Default]			
[Reference]			
[Example]	To print the graphic bank from dotline 10 to dotline 40, send: 1BH FAH 0AH 1EH		

ESC v

[Name]	Transmit paper sensor status		
[Format]	ASCII	ESC	v
	Hex	1B	76
	Decimal	27	118
[Description]	When this command is received, transmit the current status of the paper sensor.		
[Notes]	• This command is executed immediately, even when the		

data buffer is full (Busy).

The status to be transmitted is shown in the table below:

Bit	Off/On	Hex	Decimal	Function
0,1	Off	00	0	Cover close, paper present
	On	03	3	Cover open or paper sensor not working
2,3	Off	00	0	Paper-end sensor: Paper present
	On	0C	12	Paper-end sensor: Paper not present
4	Off	00	0	Not used. Fixed to Off.
5	Off	00	0	Head temperature correct
	On	20	32	Head temperature error
6	Off	00	0	Battery voltage correct
	On	40	64	Battery voltage error
7	Off	00	0	Not used. Fixed to Off.

[Default]

[Reference]

[Example]

GS \$ n

[Name] **Set absolute shift into a graphic line.**

[Format] ASCII GS \$ n
Hex 1D 24 n
Decimal 29 36 n

[Range] $0 \leq n \leq 47$

[Description] Set the print beginning position into a graphic line based on the current value of n that indicate the byte number of shift from left margin.

[Notes] • Settings outside the specified printable area are ignored.

[Default]

[Reference]

[Example]

3. PRINTER FUNCTIONS

GS I n

[Name] **Transmit printer ID.**

[Format] ASCII GS I n
 Hex 1D 49 n
 Decimal 29 73 n

[Range] $1 \leq n \leq 3, 49 \leq n \leq 51$

[Description] Transmits the printer ID specified by n follows:

n	Printer ID	Specification
1, 49	Printer model ID	50H
2, 50	Not used	Fixed to Off
3, 51	ROM version ID	Depends on ROM version (4 character)

[Notes] • This command is executed when the data is processed in the data buffer. Therefore, there could be a time lag between command reception and data transmission, depending on data buffer status.

[Default]

[Reference]

[Example]

GS U

[Name] **Resets the printer parameters to default.**

[Format] ASCII GS U
 Hex 1D 55
 Decimal 29 85

[Description] Resets the printer parameters to the default configuration.

[Notes] • After executing this command the printer is initialized.

[Default]

[Reference]

[Example]

GS W n d1 ...dn

[Name]	Prints n byte of a 200 dpi graphic line				
[Format]	ASCII	GS	W	n	d1... dn
	Hex	1D	57	n	d1... dn
	Decimal	29	87	n	d1... dn
[Range]	$1 \leq n \leq 48$				
	$0 \leq d1 \dots dn \leq 255$				
[Description]	Print n byte of a 200 dpi graphic line where : • n specifies the number of byte to print; • d1...dn specify the bytes to print.				
[Notes]	• If the bit image data input exceeds the number of dots to be printed on a line, the excess data are processed as printable characters. • <i>d</i> indicates the bit image data. Set a corresponding bit to 1 to print a dot, or to 0 to not print the dot. • This command is not affected by the emphasized, double-strike, underline (etc.) print modes, except for the upside-down mode.				
[Default]					
[Reference]					
[Example]	For printing 12 bytes the command sequence is : 1D 57 0C FF 00 FF 00 FF 00 FF 00 FF 00 FF 00				

4. TECHNICAL SPECIFICATIONS

4.1 TECHNICAL SPECIFICATIONS

Table 4.1 gives the main technical specifications of the printer.

(Tab.4.1)

Resolution	203 DPI (8 dot/mm)
Paper roll size	57.5 mm ± 1 mm
Sensors	Paper out
Print method	Thermal (8 dot/mm)
Print mode	Forward , reverse, 90°
Print styles	Normal, double height/width, reverse, underlines, expanded
Character fonts	1 (16 x 24 dot)
Communication interfaces available	RS232
Driver for Windows	95 / 98 / NT / W2K
Baud rate	600 to 38400 bps
Print buffer	128 bytes
Flash memory	32K
Graphics memory	1 logo of 384 x 85 dots
Print speed	up to 50 mm/sec ⁽²⁾
Power supply	9-50 VDC / 11VA (External power supply)
Electrical input	
Print ⁽¹⁾	500 mA
Environmental conditions	
Operating temperature	0 °C ÷ 50 °C
Relative humidity	10-85 %Rh without condensing
Storage temperature / humidity	-20 °C ÷ +70 °C / 10 %Rh ÷ 90 %Rh
Dimensions	145.96mm x 88.18mm x 64.61mm
Weight	340 gr. (without paper roll)

Note : ⁽¹⁾ STANDARD CUSTOM receipt and 1300 mAh battery.

⁽²⁾ It depends by the battery status, the printing typology and the environment temperature.

(Tab.4.2)

ESC/POS™ EMULATION	
57 mm paper	12.7 cpi
Number of columns	24, 40 ⁽³⁾
Characters (L x H mm)	
Normal	2 x 3
Double height	2 x 6
Double width	4 x 3
Double height and width	4 x 6

⁽³⁾**NOTE**

The 40 column version is downloadable on the Support/Download/Firmware section from www.custom.it web site.

4. TECHNICAL SPECIFICATIONS

4.2 ADAPTOR SPECIFICATIONS

220Vac Adaptor

(Tab.4.3)

Input specifications	
Input voltage	230 Vac
Input frequency	50 Hz

Output specifications	
Output voltage	18 Vdc

120Vac Adaptor

(Tab.4.4)


Input specifications	
Input voltage	230 Vac
Input frequency	50 Hz

Output specifications	
Output voltage	18 Vdc

4.3 DIMENSIONS

Printer dimensions are shown below.

(Fig.4.1)

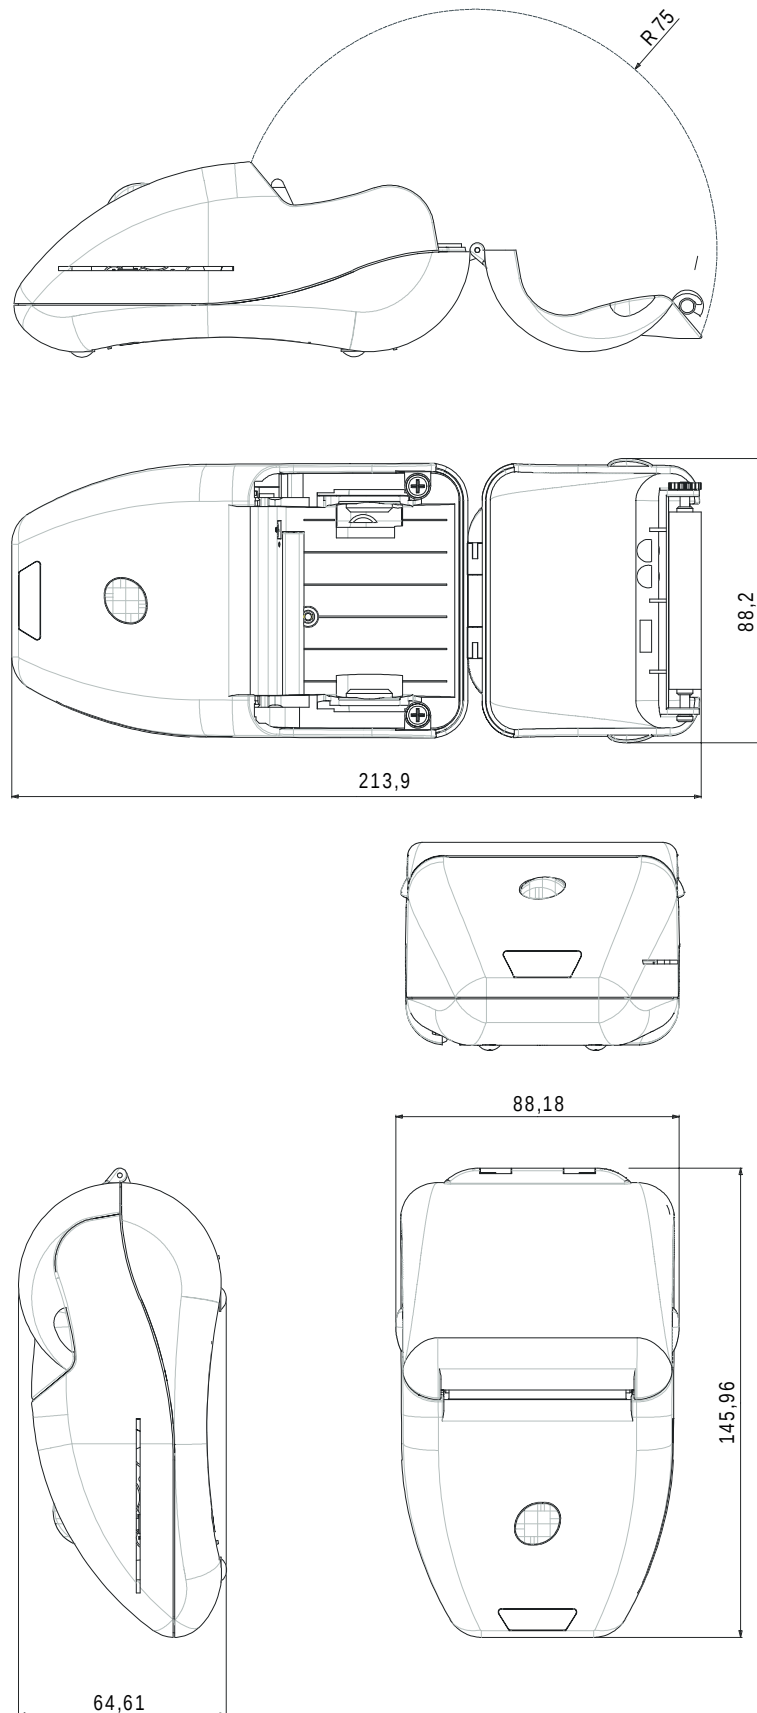

5.1 CHARACTER SETS

The printer has a 224-character font, a print-out of which is shown below.

	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	ø	@	P	Φ	p	Ç	É	ä		4	α	≡			
1	!	1	A	Q	a	q	ü	æ	i		±	β			
2	"	2	B	R	b	r	ë	ö			Γ	≥			
3	#	3	C	S	c	s	ä	ö	ü		π	≤			
4	\$	4	D	T	d	t	ä	ö	ñ		Σ	∫			
5	%	5	E	U	e	u	ä	ö	ñ		∫	∫			
6	&	6	F	V	f	v	ä	ö	ñ		μ	÷			
7	ç	7	G	W	g	w	ç	ü	ñ		τ	≈			
8	ç ₂	(	8	H	X	h	x	ë	ü		ø	°			
9	ç ₃	)	9	I	Y	i	y	ë	ü		θ	·			
A	ç ₄	*	:	J	Z	j	z	ë	ü		λ				
B		+	;	K	[	k	°	i	½		δ	√			
C	ç ₅	<	L	\	l	±	î	£	¼		ω	π			
D	ç ₆	=	M	]	m	μ	î	§	ı		ø	z			
E	ç ₇	>	N	^	ñ	ñ	Ä	Ä	«		€	Δ			
F	ç ₈	/	?	O	_	o	Ä	Ä	»		€	†			

(Fig.5.1)

A.1 SPARE PARTS**(Tab.A.1)**

RCT57X50	Roll of thermal paper
PCALI-DP-E	Adapter
CB9POLI-PLUG8	Serial cable